

FIXING INSTRUCTIONS KOZ SQ 25-35

CONFIGURATION: CENTER HOLE INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components:

2x Threaded rods | 2x Washers | 6x Nuts | 1x Sliding nut & 1x Hex bolt (fix on rail) | 1x Cable cleat

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

1

Threaded rods configuration

Place the threaded rods in the bottom part using the nuts.

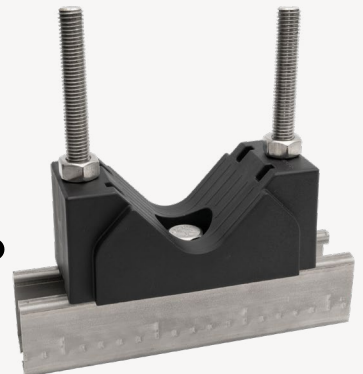
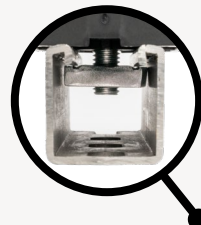
Recommended torque: 5-8 Nm.

**2**

C-profile / Rail configuration

Place and secure the bottom part of the cable cleat on the rail using the hex bolt and sliding nut in the center hole.

Recommended torque: 5-8 Nm.

**3**

Upper part

Place the cables accordingly unto the bottom part. Position the upper part over the cables and secure with washers and nuts.

Recommended torque: 5-8 Nm.

