

FIXING INSTRUCTIONS KOZ STC RANGE

CONFIGURATION: SIDE HOLES (C-PROFILE / RAIL) INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components:

2x Threaded rods | 2x Washers | 4x Nuts | 2x Sliding nuts | 1x Cable cleat

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

Compatible with KOZ® STC-series cable clamp types:

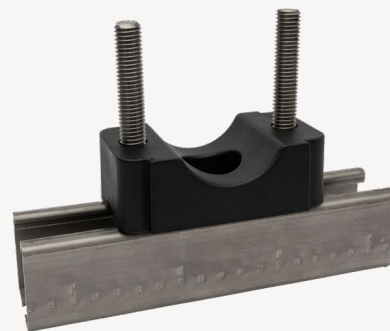
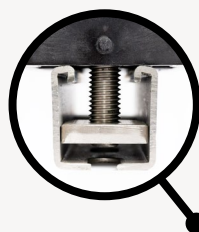
STC 21-38 | STC 36-52 | STC 46-75 | STC 72-100 | STC 100-130 | STC 120-160

1

C-profile / Rail configuration

Place the bottom part on top of the rail using the sliding nuts and threaded rods.

2x

**2**

Cables

Secure the bottom part of the cable cleat using two nuts and then place the cables accordingly unto the bottom part. Recommended torque: 5-8 Nm.

2x

**3**

Upper part

Position the upper part over the cables and secure with washers and nuts. Recommended torque: 5-8 Nm.

2x



2x

