

FIXING INSTRUCTIONS KOZ ST RANGE

CONFIGURATION: SIDE HOLES (C-PROFILE / RAIL) INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components:

2x Threaded rods | 2x Washers | 4x Nuts | 2x Sliding nuts | 1x Cable cleat

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

Compatible with KOZ® ST-series cable clamp types:

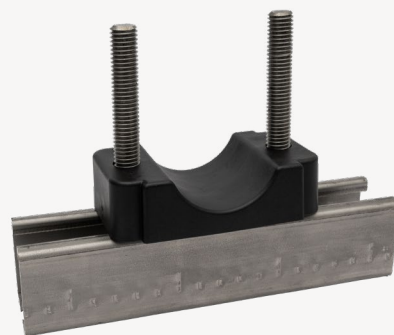
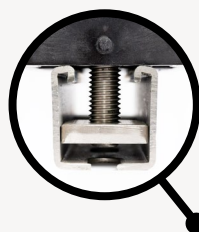
ST 18-26 | ST 26-38 | ST 36-52 | ST 50-75 | ST 75-100 | ST 75-105 | ST 100-130 | ST 120-160

1

C-profile / Rail configuration

Place the bottom part on top of the rail using the sliding nuts and threaded rods.

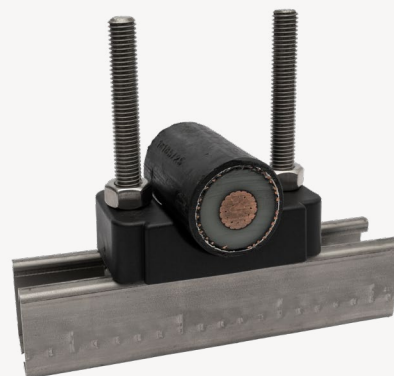
2x

**2**

Cables

Secure the bottom part of the cable cleat using two nuts and then place the cables accordingly unto the bottom part. Recommended torque: 5-8 Nm.

2x

**3**

Upper part

Position the upper part over the cables and secure with washers and nuts. Recommended torque: 5-8 Nm.

2x



2x

