

FIXING INSTRUCTIONS KOZ UNI 3X 30-49 MULTIPLE LAYERS

CONFIGURATION: C-PROFILE / RAIL INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components for two layers:

2x Threaded rods | 6x Washers | 6x Nuts | 2x Sliding nuts | 3x Cable cleats

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

1

C-profile / Rail configuration

Place the first part on top of the rail using the sliding nuts and threaded rods.

2x

**2**

First part

Secure the first part of the cable cleat using washers and nuts. Place the cables accordingly unto the first part. Recommended torque: 5-8 Nm.

2x



2x

**3**

Second part

Position the second part over the cables and secure with washers and nuts. Place the next row of cables accordingly unto the second part.

Recommended torque: 5-8 Nm.

2x



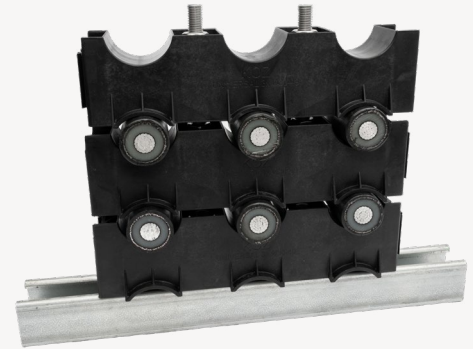
2x



4**Third part**

Position the third part over the cables and secure with washers and nuts.

Recommended torque: 5-8 Nm.

**5****Three layers?**

Repeat steps 3 & 4 for the 3rd layer.