

FIXING INSTRUCTIONS KOZ UNI 3X 45-67 ONE LAYER

CONFIGURATION: C-PROFILE / RAIL INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components:

2x Threaded rods | 4x Washers | 4x Nuts | 2x Sliding nuts | 2x Cable cleat

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

1

C-profile / Rail configuration

Place the bottom part on top of the rail using the sliding nuts and threaded rods.

2x

**2**

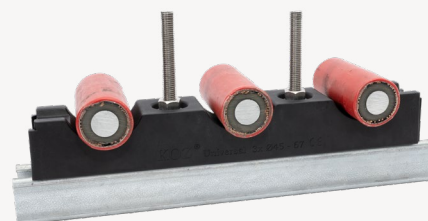
Bottom part

Secure the bottom part of the cable cleat using washers and nuts. Place the cables accordingly unto the bottom part. Recommended torque: 5-8 Nm.

2x



2x

**3**

Upper part

Position the upper part over the cables and secure with washers and nuts. Recommended torque: 5-8 Nm.

2x



2x

