

FIXING INSTRUCTIONS KOZ UNI TRI 3X3 27-37 ONE LAYER

CONFIGURATION: STANDARD INSTALLATION

Recommended torque moment: 5-8 Nm

Clamp Assembly Components:

2x Threaded rods | 6x Washers | 6x Nuts | 2x Cable cleats

Installation notes:

- To ensure a safe and guaranteed installation, apply force evenly
- In general apply force until you feel a slight resistance

1

Threaded rods configuration

Place the threaded rods in the first part using the nuts and washers.

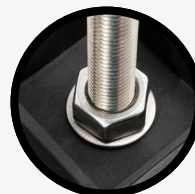
Recommended torque: 5-8 Nm.

**2**

First part

Secure the first part of the cable cleat using washers and nuts. Place the cables accordingly unto the first part.

Recommended torque: 5-8 Nm.

**3**

Second part

Position the second part over the cables and secure with washers and nuts.

Recommended torque: 5-8 Nm.

